


BASE CONCAVE CABINET

1. Insert four $7/8$ " splines into the four corners of the cabinet FRONT. Insert six $7/8$ " splines into each concave rail, and two 6" splines into each stile.

Note: Glue should be spread around splines where the SIDES, TOP and BOTTOM will come in contact with the FRONT FRAME.


2. Line up the cabinet SIDE with the cabinet FRONT. Push one cabinet SIDE down onto the splines in the cabinet FRONT.
3. Using the female dovetails in the SIDES, slide the TOP & BOTTOM down onto the splines in the FRONT FRAME (as shown.) Make sure the rabbet is toward the inside of the cabinet.

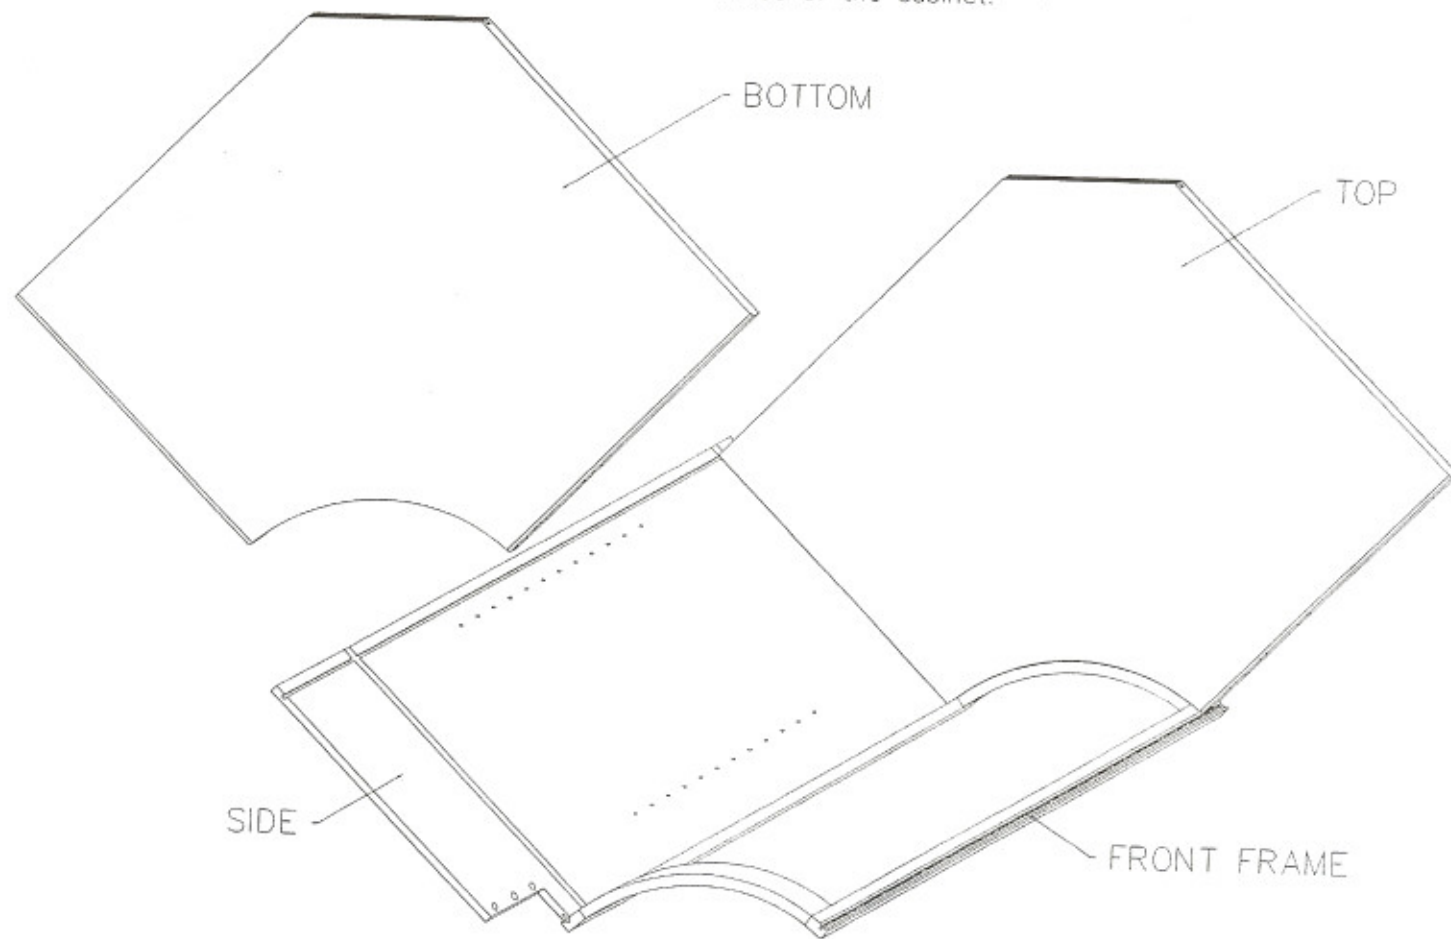

BASE CONCAVE CABINET (cont.)


4. Using the male dovetails on the TOP & BOTTOM, slide the other cabinet SIDE down onto the splines in the cabinet FRONT.
5. Using the rabbets in the TOP & BOTTOM, slide the cabinet BACK down until it is seated in the cabinet SIDE plough.

Note: If installing SHELVES or LAZY SUSANS, place inside the cabinet now.

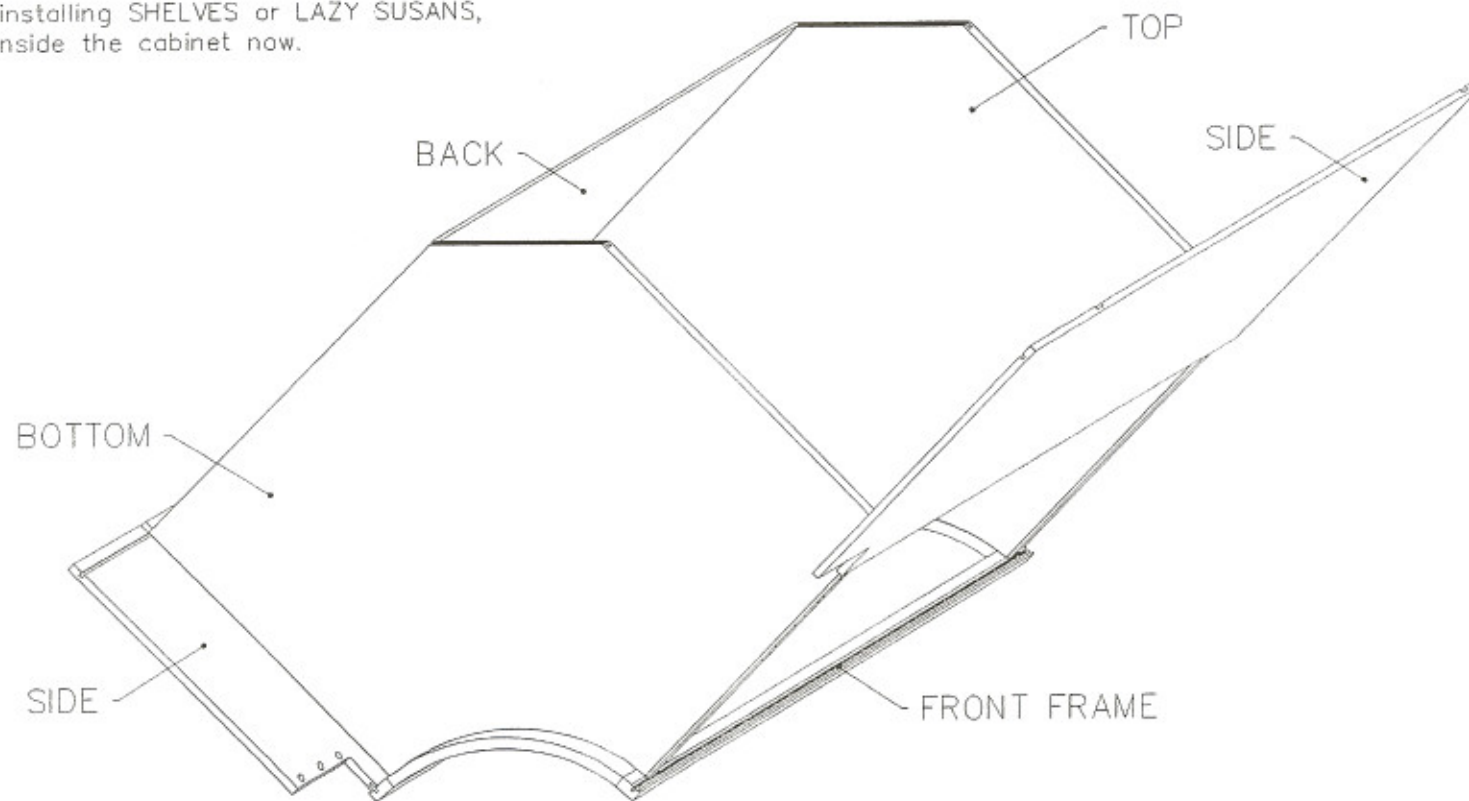

BASE CONCAVE CABINET (cont.)

6. Slide the other cabinet BACK into position.
7. Spread glue in the ploughs of the BACK SLANT. Insert one 6" spline into each end of the BACK SLANT groove. This will provide proper adhesion between the BACKS, TOP and BOTTOM and BACK SLANT.

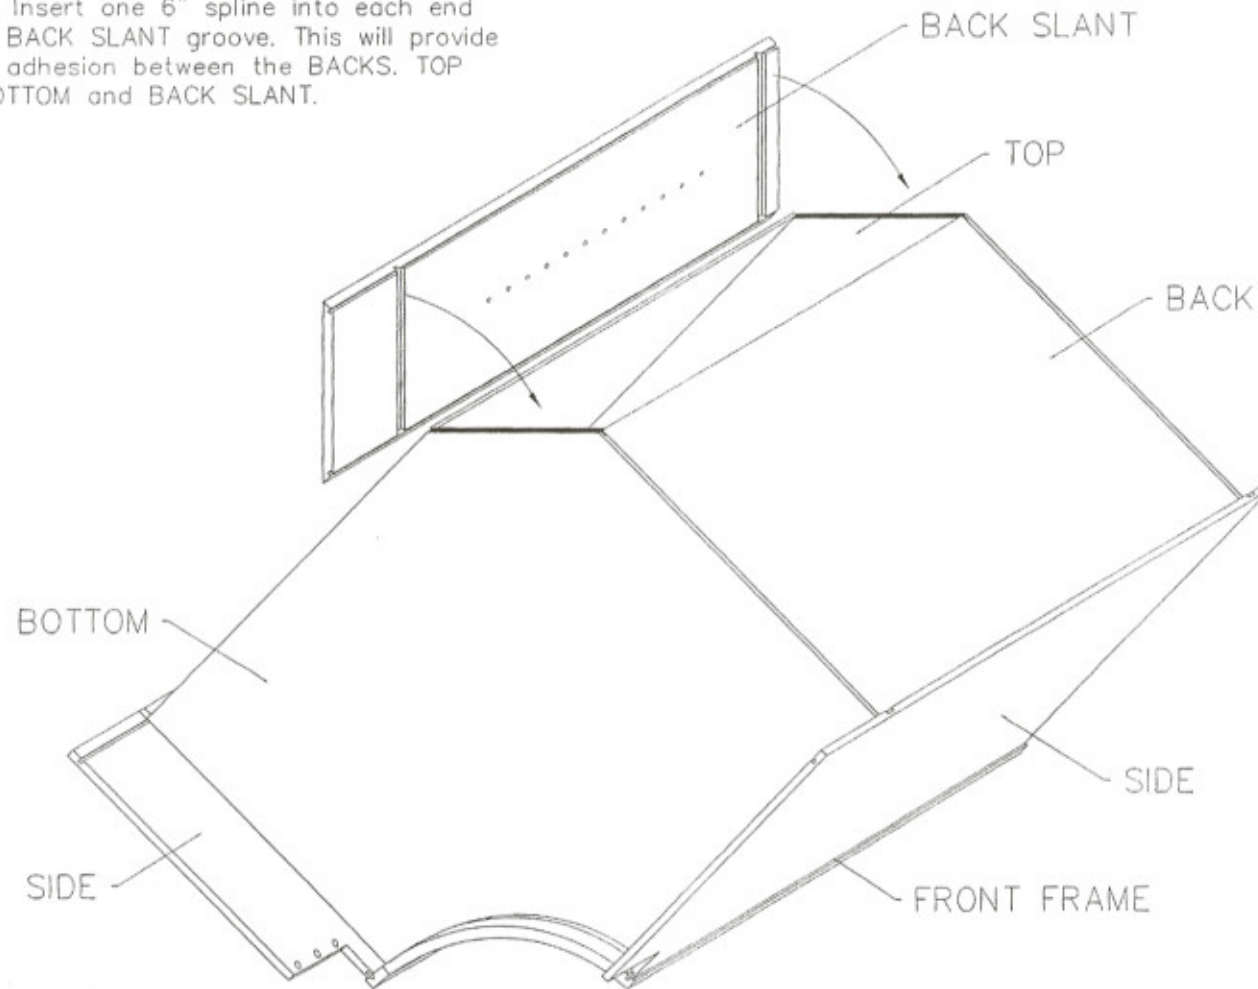

BASE CONCAVE CABINET (cont.)

8. Apply a bead of glue on cabinet BACK. Slide HANGER CLEAT into place. Using the scribe line on CLEAT, pin the CLEAT into place. Do this for each HANGER CLEAT.
9. Position the TOEBOARD (as shown.) Tack it into place with some finishing nails.

