


BASE DOUBLE ENTRY CABINETS

1. Place cabinet SIDES in assembly jig.
2. Slide the BOTTOM into the female dovetails. (as shown)
3. If TOE BOARDS are ordered, insert them at this time. Slide 3" STRIPS into top female dovetail with the grooved edge facing toward the FRONT FRAME.
4. After spreading glue in the slotted edges of the SIDES, BOTTOM and 3" STRIP, the FRONT FRAME can now be attached. Match the splines in FRONT FRAME to the slots in the cabinet box and 3" STRIP. Tap the FRONT FRAME on with a rubber mallet. Make sure the cabinet FRONT is pressed firmly onto the cabinet box.

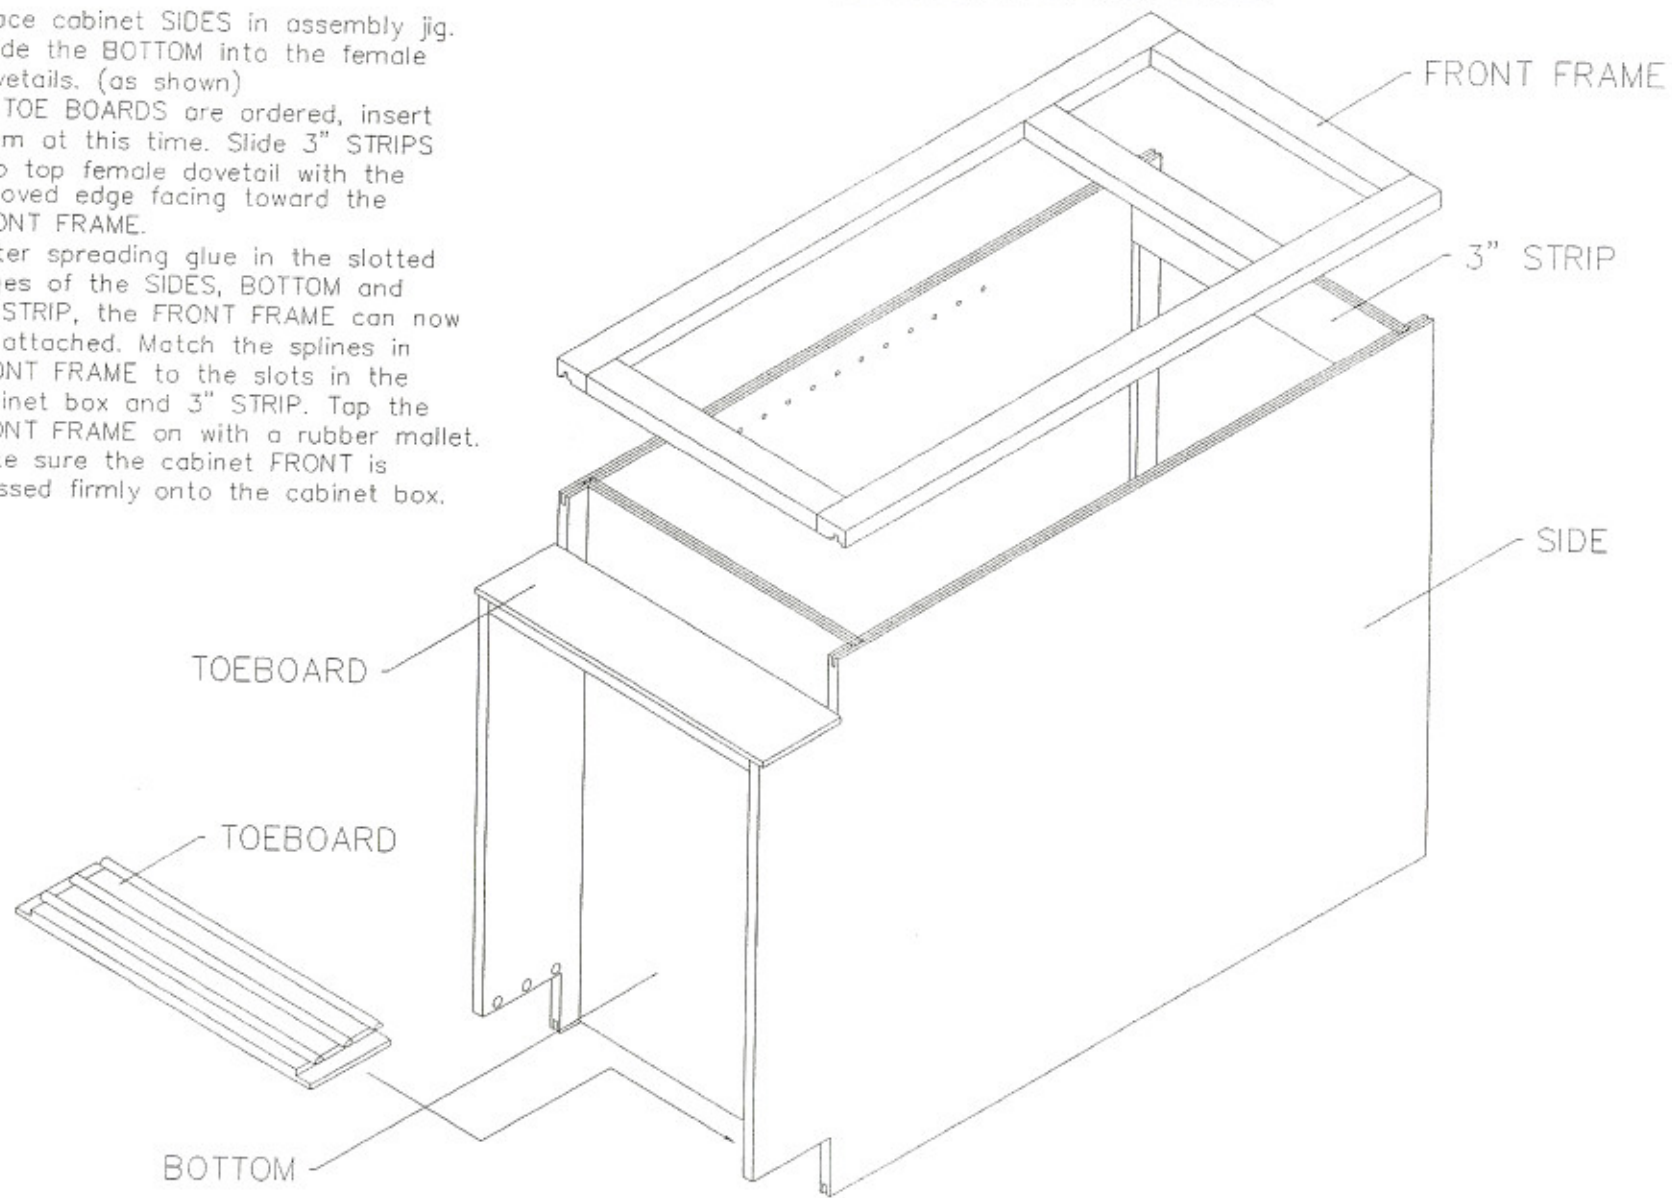

BASE DOUBLE ENTRY CABINETS (cont.)

5. Turn cabinet over onto the FRONT FRAME.
6. Repeat step #4 to attach other FRONT FRAME.
7. Install false drawer support behind FRONT FRAME.

