



OVEN CABINETS

1. Holding the SIDES upright, slide the MID-TOP and the MID-BOTTOM into dovetails (as shown). Make sure the rabbet is positioned to accept the cabinet BACK (as shown). Slide the HANGER CLEATS temporarily into place (as shown).
2. Slide the cabinet BACKS into place using the ploughs at the back of the SIDES. The two BACKS will fit between the TOP and MID-TOP and between the BOTTOM and MID-BOTTOM.

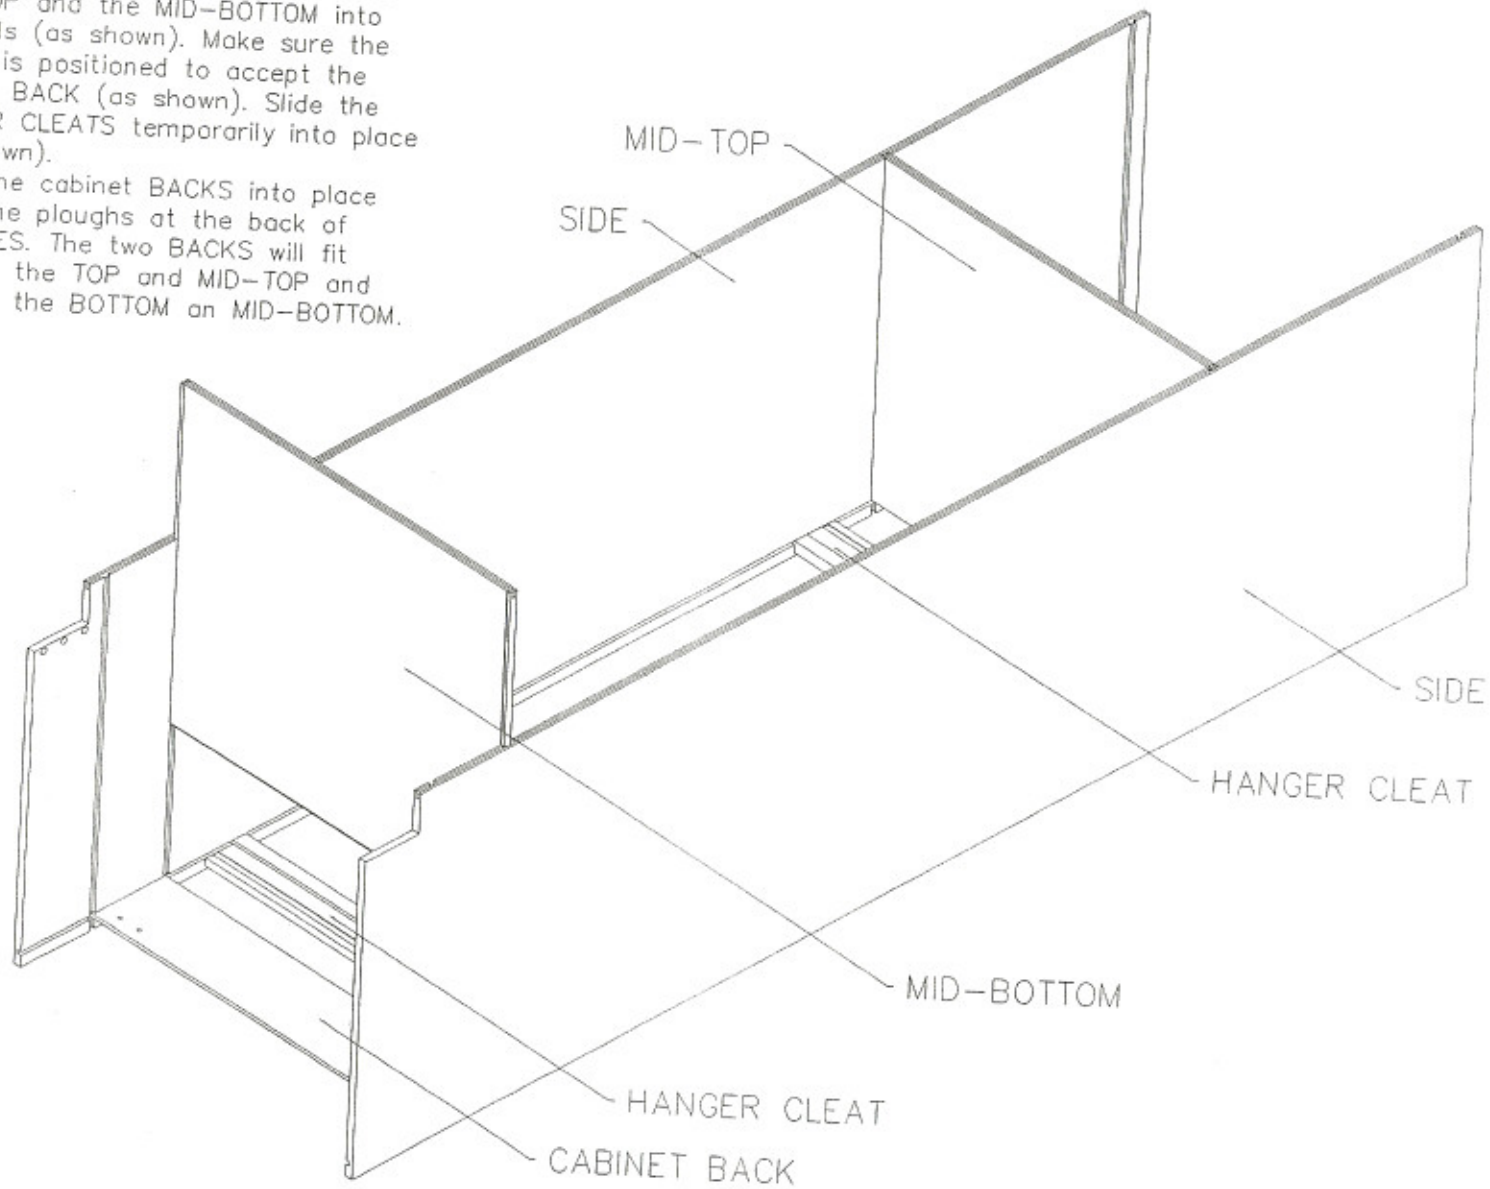


OVEN CABINETS (cont.)

3. If TOE BOARD is ordered, insert it into the pre-drilled toeboard holes.
4. Slide the TOP and BOTTOM into the female dovetails (as shown). Make sure the grooved edge is up, and the rabbets are toward the inside of the cabinet.

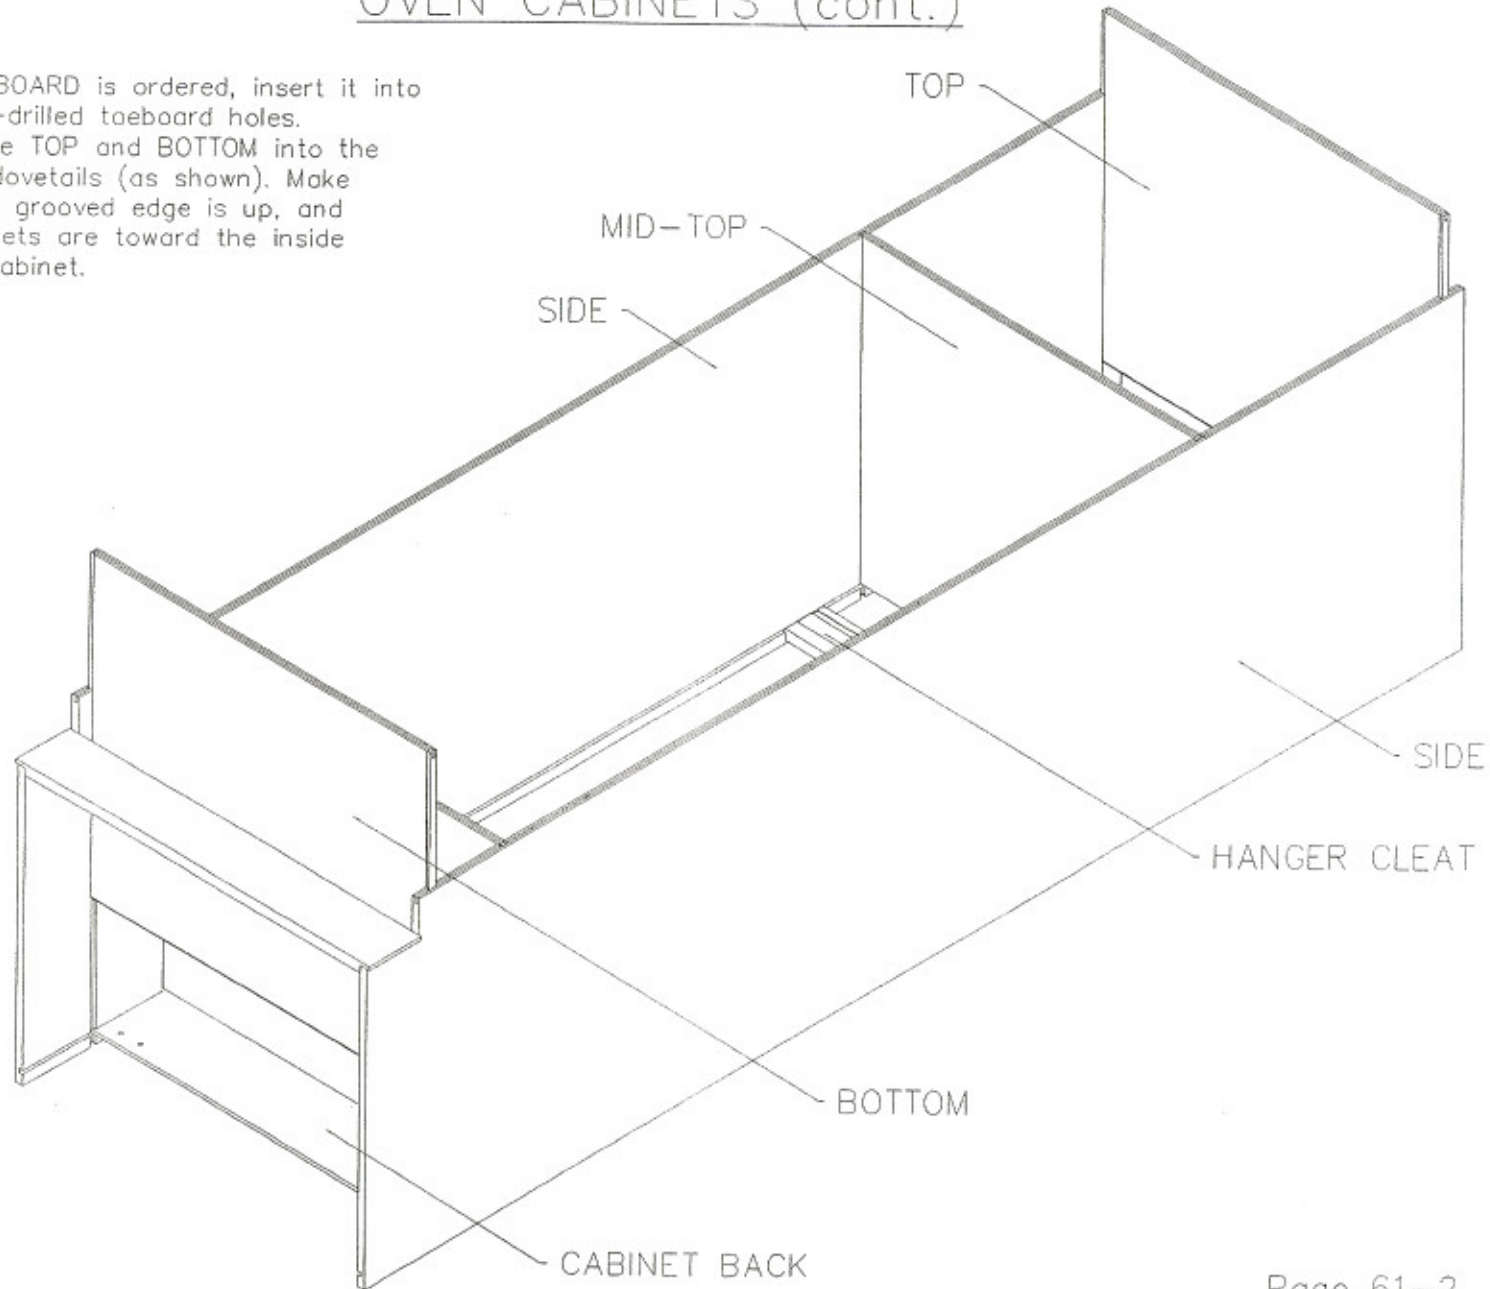

OVEN CABINETS (cont.)

5. After inserting splines into the FRONT FRAME, spread glue into the slotted edges of the cabinet box (including MID-TOP and MID-BOTTOM), the FRONT FRAME can now be attached. Match the splines in the FRONT with the slots in the cabinet box. Tap the FRONT on with a rubber mallet. make sure the FRONT is pressed firmly onto the cabinet box.

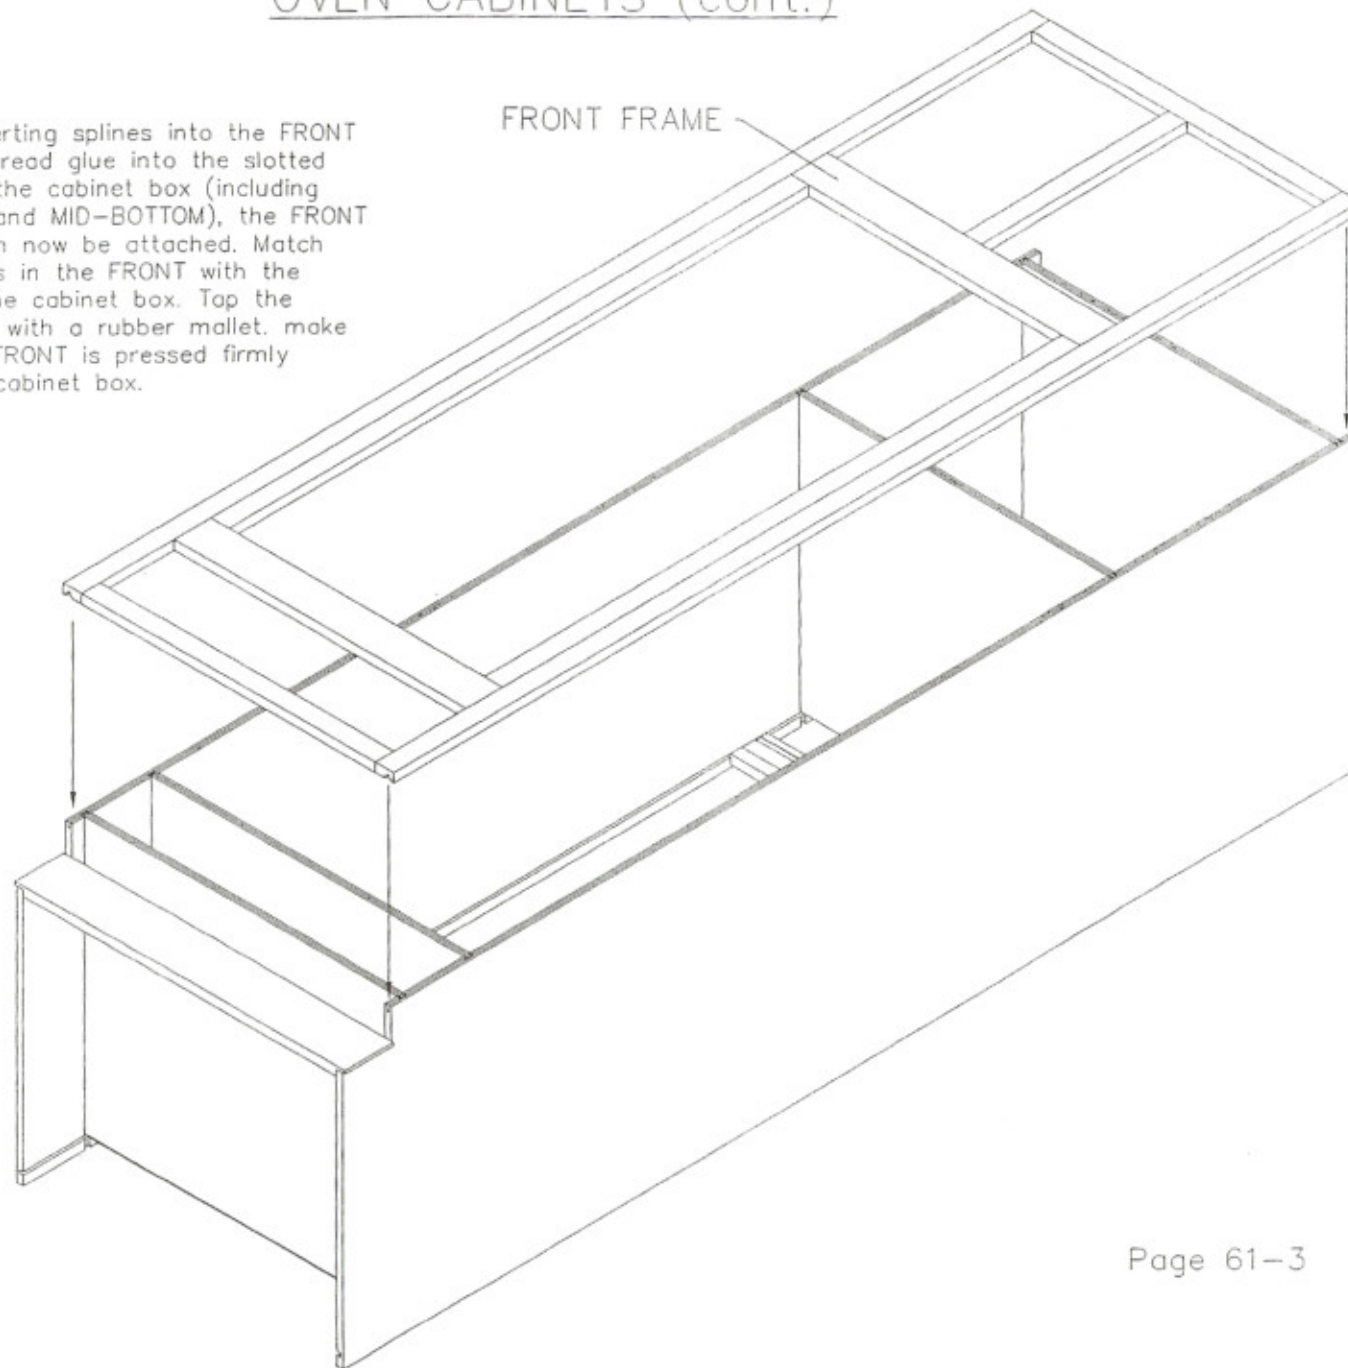

OVEN CABINETS (cont.)

6. Lay cabinet face down on a clean surface.
7. Apply a bead of glue on the back of the cabinet BACKS. (as shown)
8. Slide the HANGER CLEATS into place.
9. Using the scribe line on the HANGER CLEAT, pin the CLEAT into place. Pin through the cabinet SIDES into the CLEATS. Use at least 3/4" long pins.

