


BASE & WALL PIE CUT CABINETS


1. Slide the TOP and BOTTOM into the female dovetails in the cabinet SIDE (as shown)
Make sure the rabbet is toward the inside of the cabinet.
2. Slide the other cabinet SIDE down onto the male dovetails on the TOP and BOTTOM.

NOTE:

If assembling a Wall Pie Cut Cabinet, there will not be a TOEBOARD.

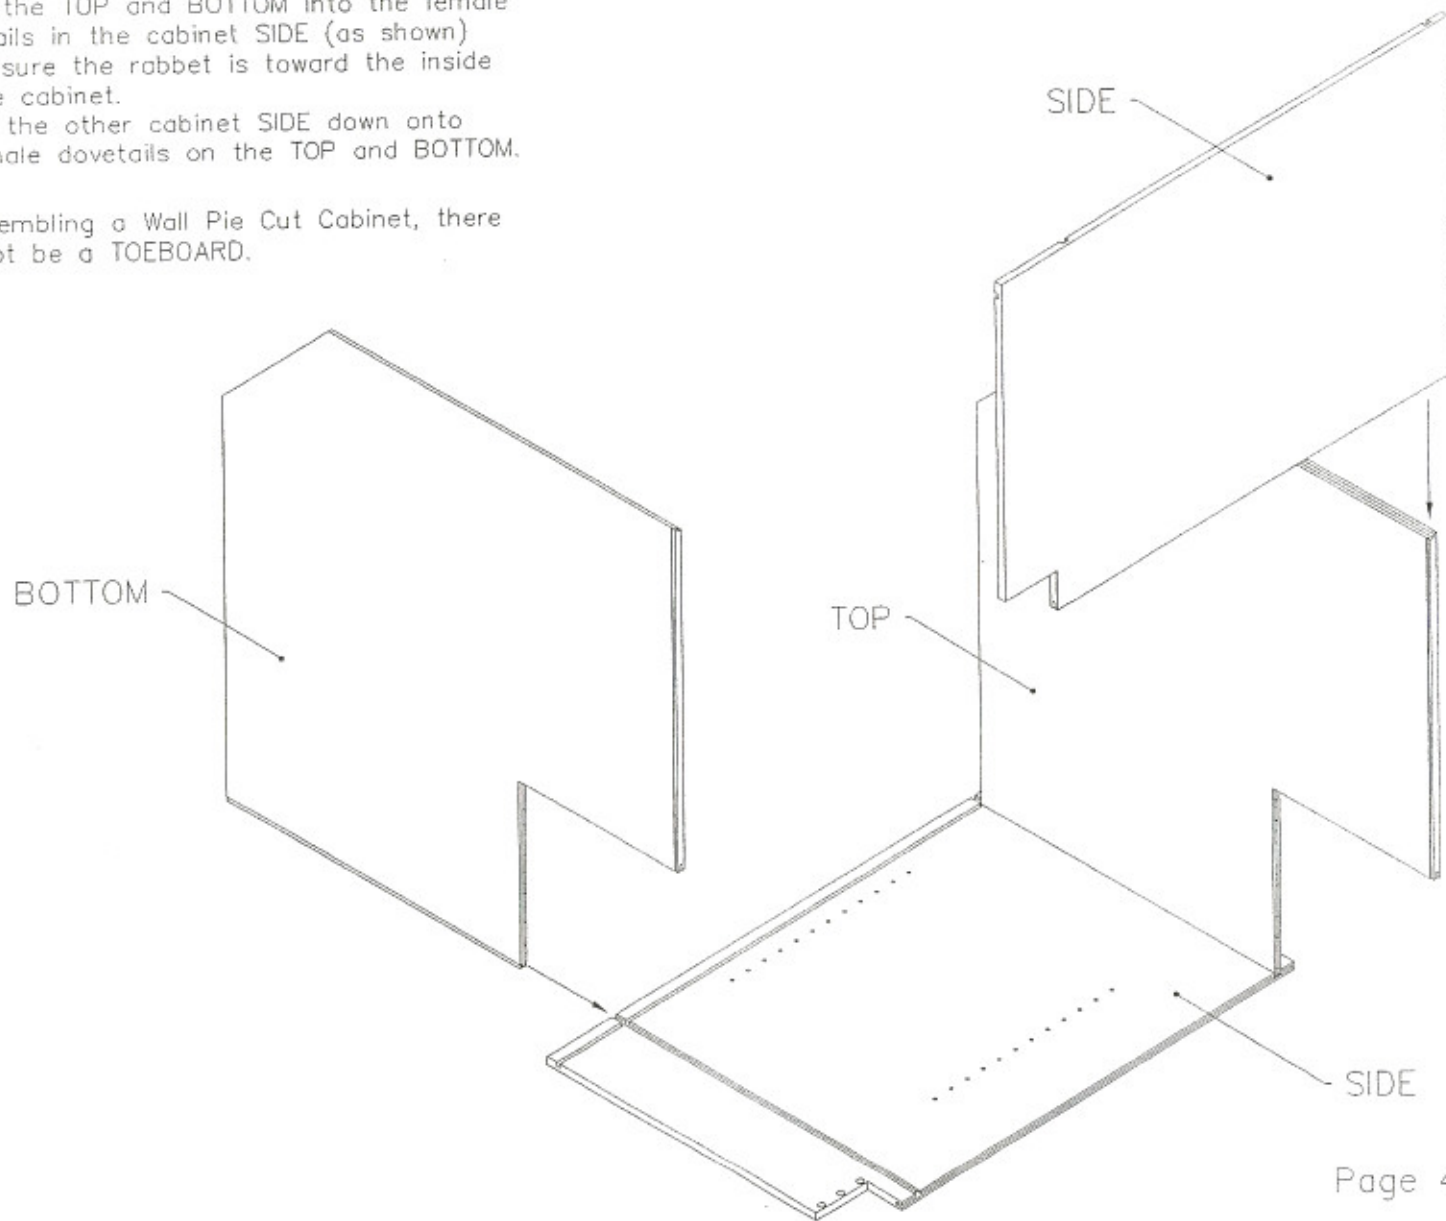


BASE & WALL PIE CUT CABINET (cont.)

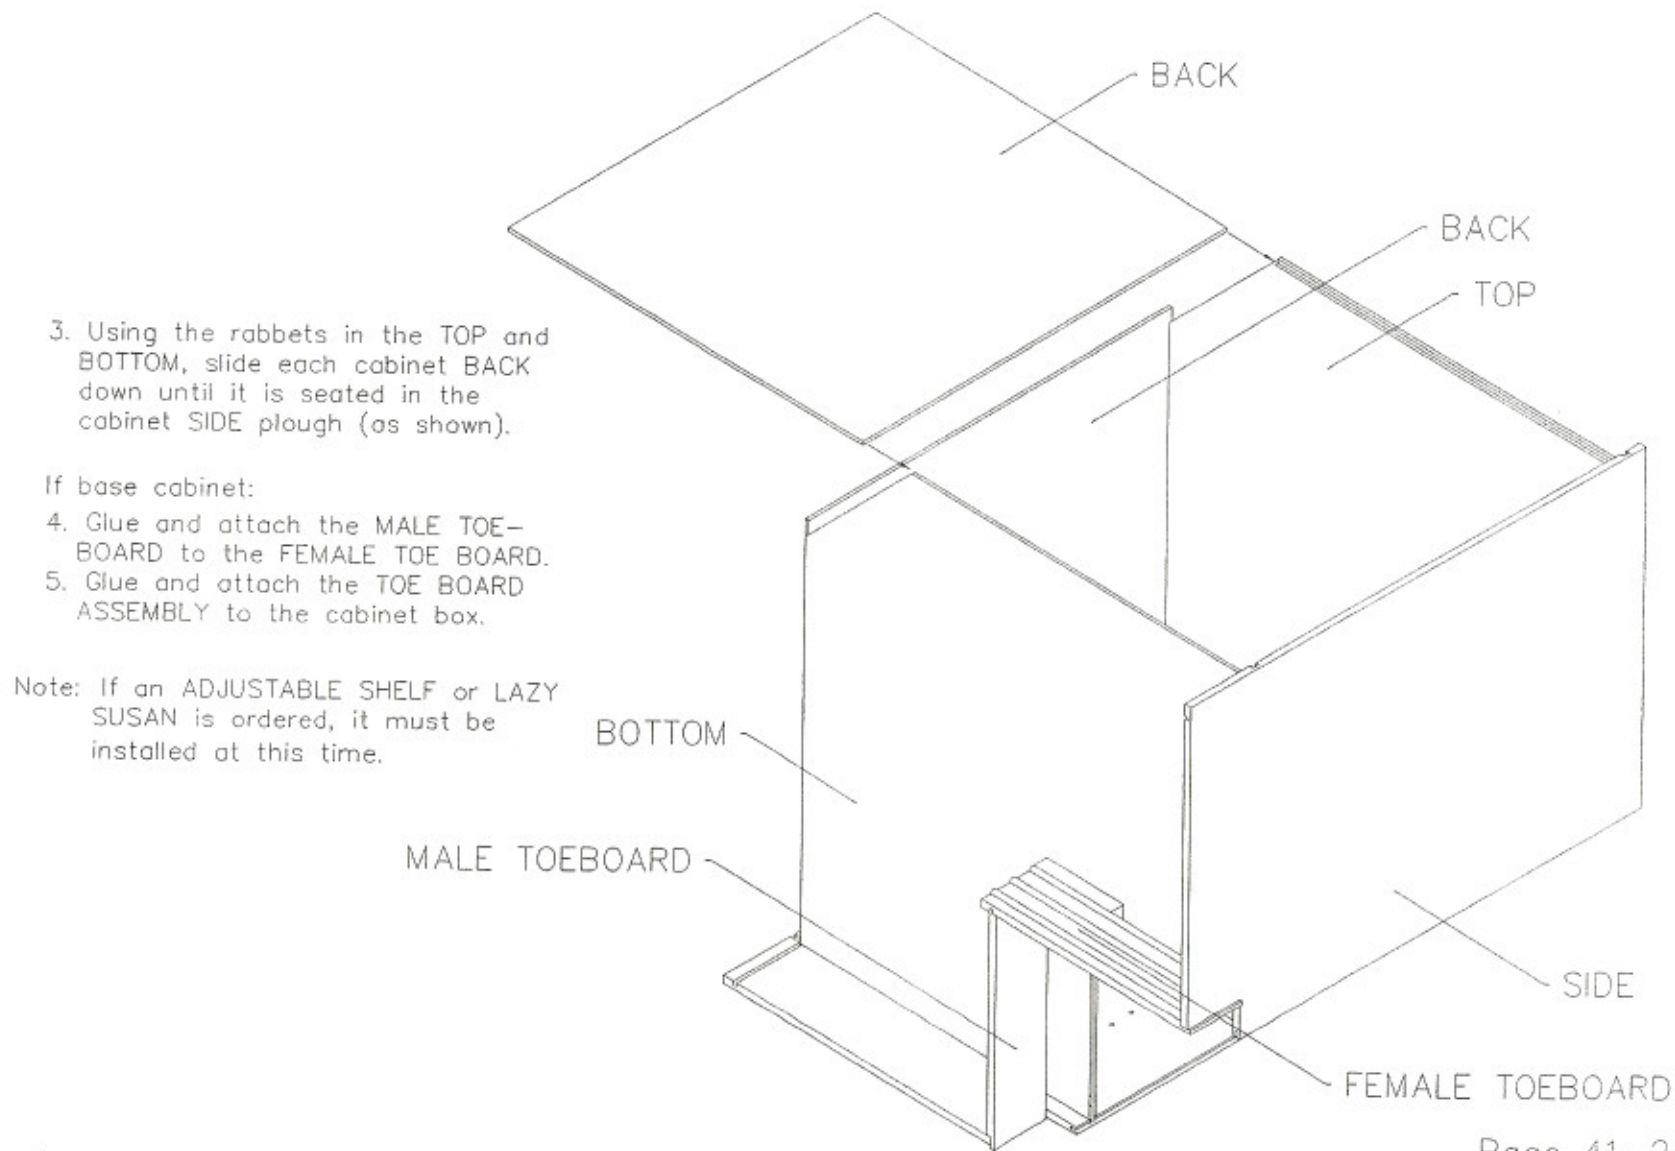

BASE & WALL PIE CUT CABINETS (cont.)

6. Insert a 6" spline in the TOP and BOTTOM groove in the BACK SLANT. The BACK SLANT can now be attached. The cabinet BACKS must fit into the grooves in the BACK SLANT before it can be attached to the cabinet box.
7. Apply a bead of glue on the cabinet BACK. Slide the HANGER CLEAT into place. Using the scribe line on the CLEAT, pin the CLEAT into place. Do this for each HANGER CLEAT.

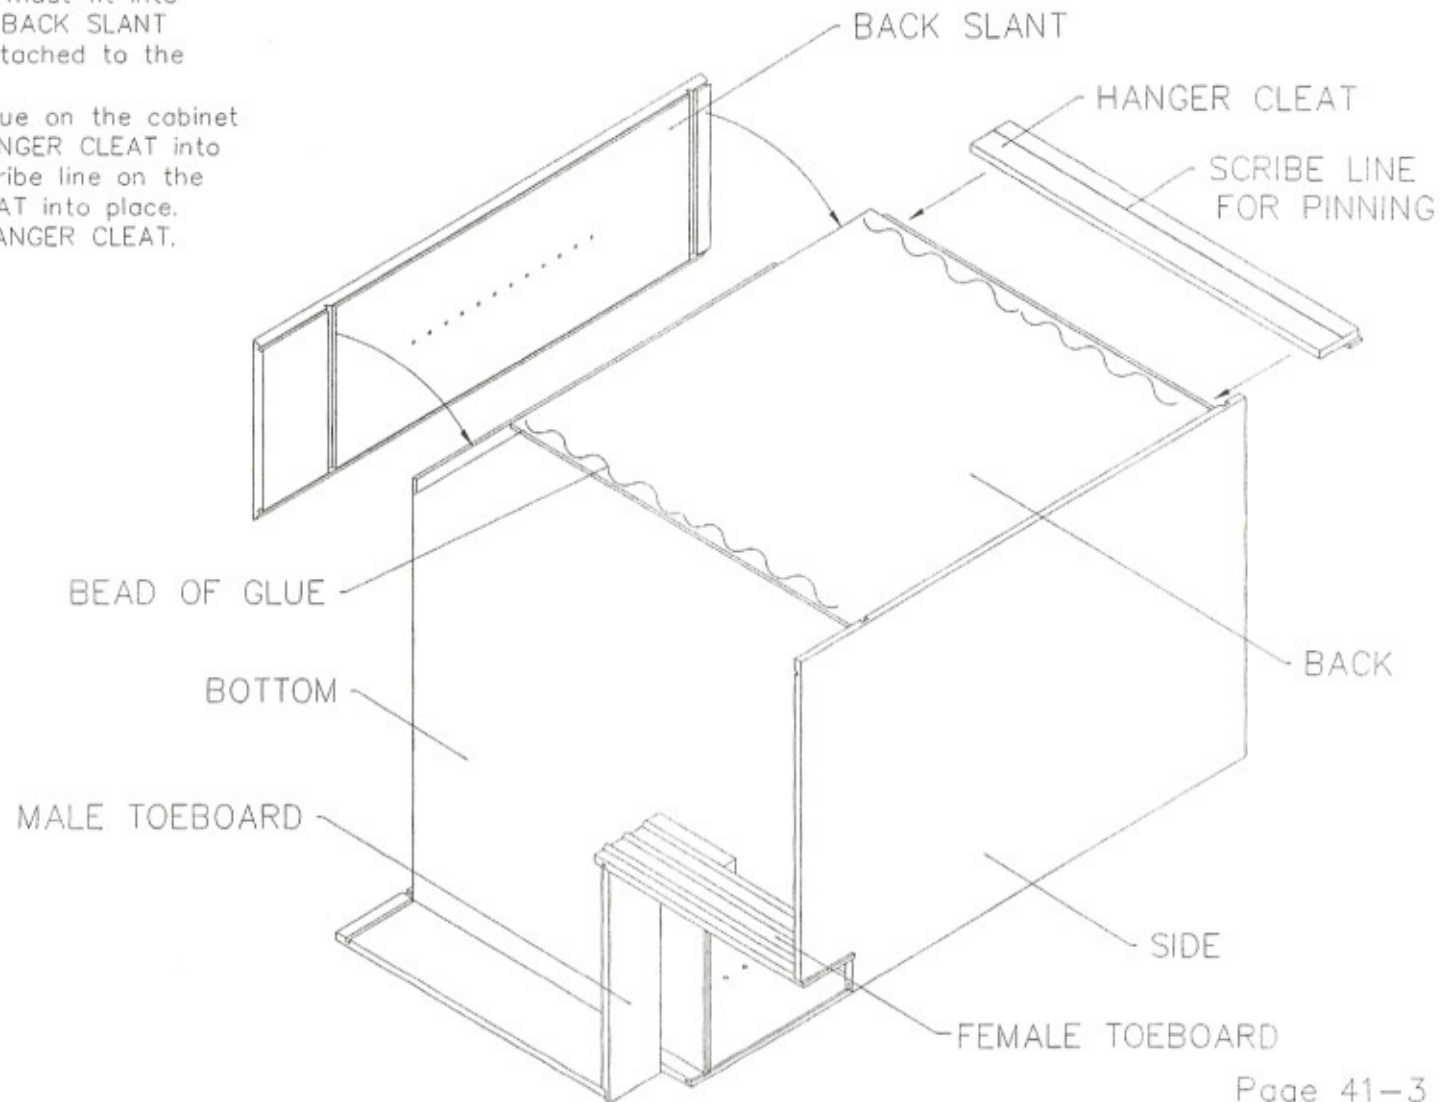

BASE & WALL PIE CUT CABINETS (cont.)

8. To insert splines see page #2.
9. Line up the 12 3/4" FRONT FRAME (12 1/4" if a Wall Pie Cut) with the slots in the TOP, BOTTOM and SIDE. Hammer the FRONT FRAME into place with a rubber mallet. Take the 12" FRONT FRAME (11 1/4" if a Wall Pie Cut) and line up splines to groove in cabinet box, press firmly into place. The cabinet is now ready for the LAZY SUSAN to be installed. The directions for inserting the SUSAN are in the box.

