


TOE BOARD ASSEMBLY FOR 96" HIGH CABINETS

1. Throughout the assembly of the TOE BOARD use a bead of glue in all female dovetails and toe board insert holes. First, insert toe board into predrilled holes. Slide the TOE RETURN BRACE male dovetails down into the TOE RETURN female dovetails.

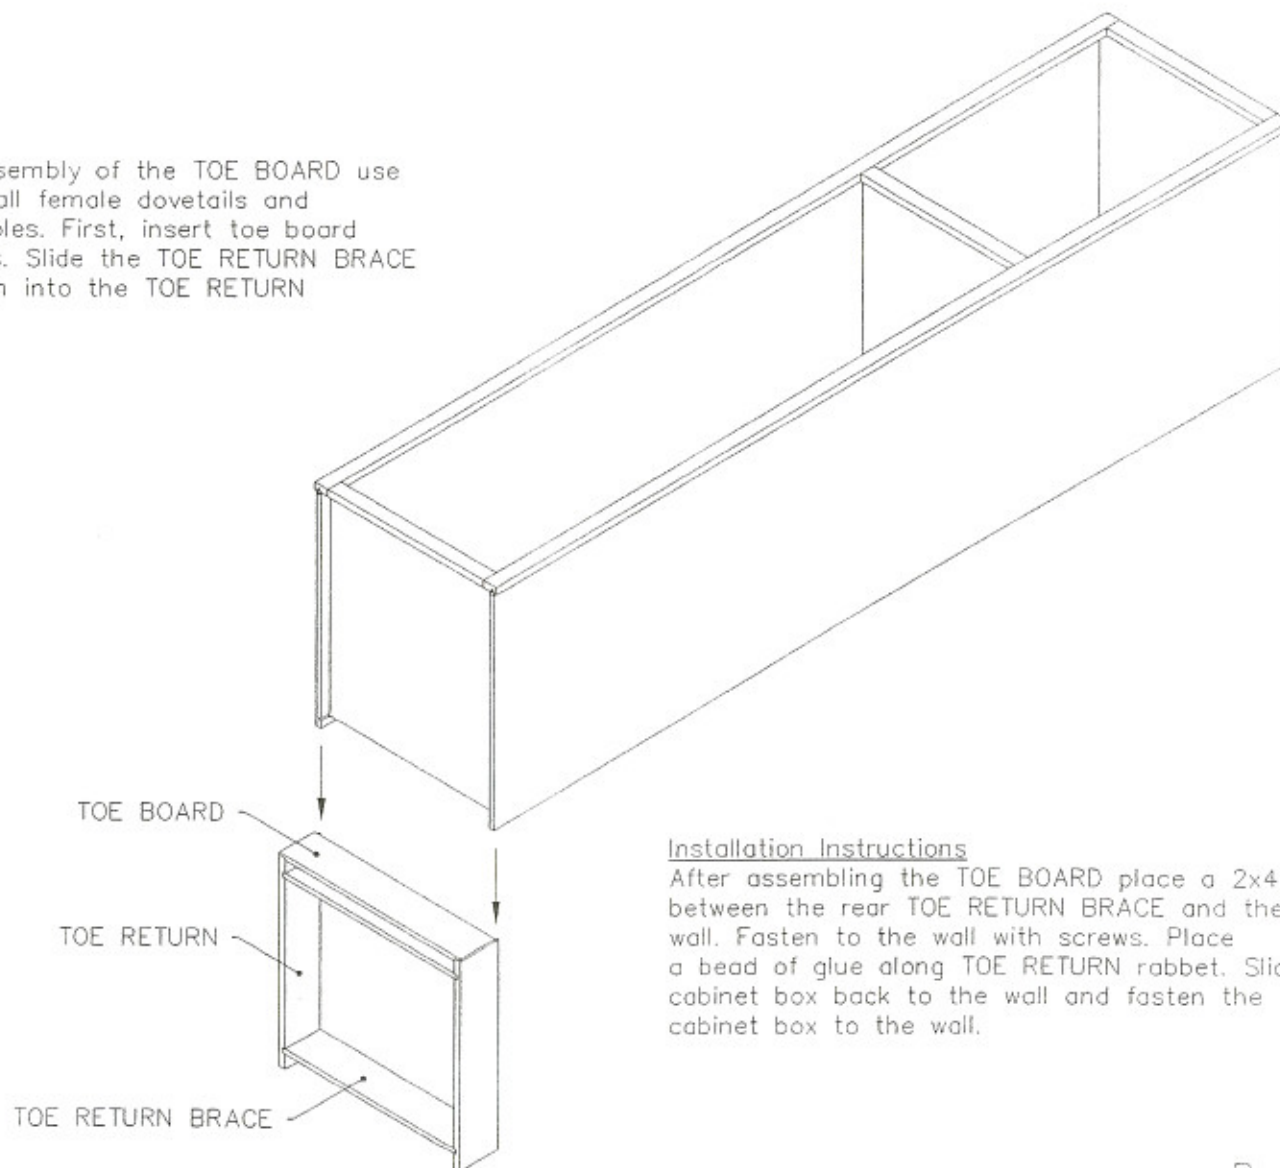

Installation Instructions

After assembling the TOE BOARD place a 2x4 between the rear TOE RETURN BRACE and the wall. Fasten to the wall with screws. Place a bead of glue along TOE RETURN rabbet. Slide cabinet box back to the wall and fasten the cabinet box to the wall.