


WALL CABINETS

1. Place cabinet SIDES in assembly jig with slotted edges up.
2. Slide the TOP into the female dovetails. (as shown) Be sure to keep the groove edges up, and the rabbet toward the inside of the cabinet.
3. Slide the cabinet BACK into the ploughs at the back of the SIDES. The back will fit into the rabbet on the TOP.

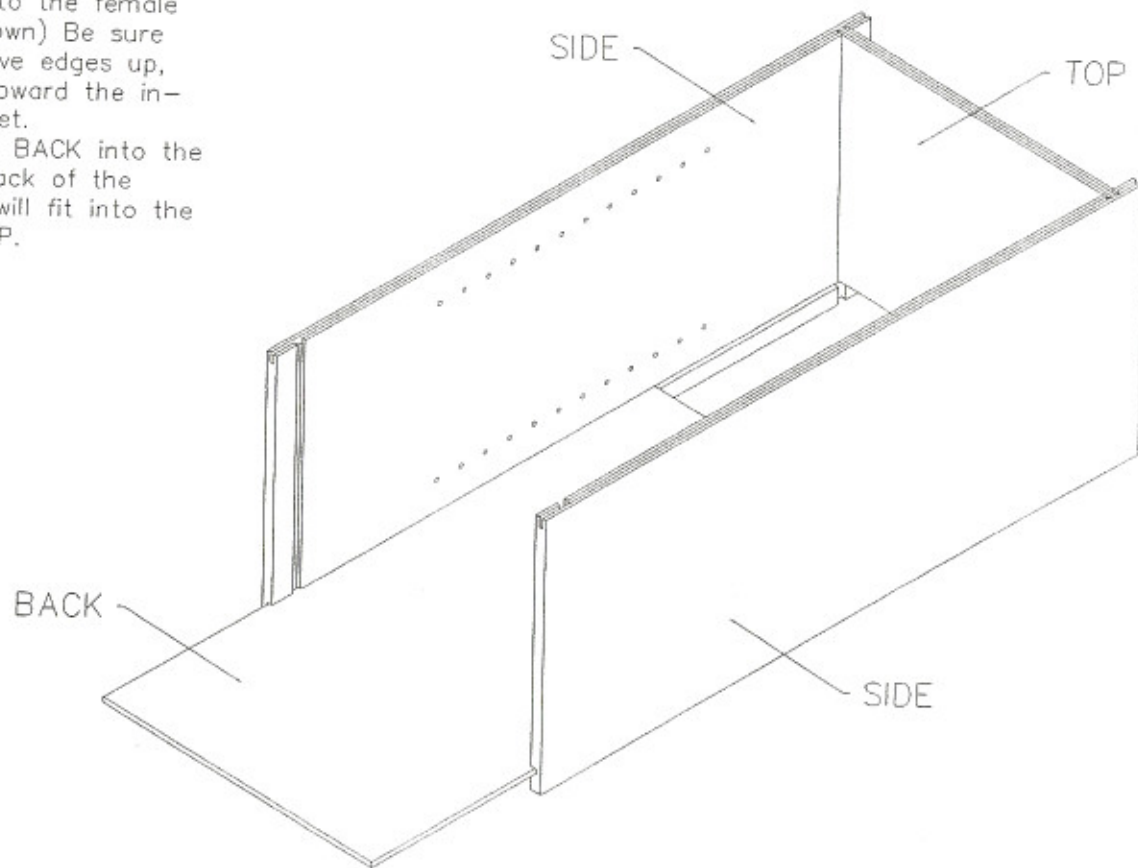

WALL CABINETS (cont.)

- Slide the BOTTOM into the cabinet SIDE dovetail. (as shown) Be sure to keep the grooved edge up, and the rabbet toward the inside of the cabinet. The cabinet BACK will fit into the rabbet on the BOTTOM.
- Prepare the FRONT FRAME per the instruction on page #2.
- After inserting splines into FRONT FRAME, spread glue into the slotted edges of the SIDES, TOP and BOTTOM, the FRONT FRAME can now be attached. Match the splines in the FRONT to the slots in the cabinet box. Tap the FRONT on with a rubber mallet. Make sure the cabinet front is pressed firmly onto the cabinet box.
- To attach HANGER CLEATS see page #3.

