



## WALL CONCAVE CABINET

1. Insert four  $7/8$ " splines into the four corners of the cabinet FRONT FRAME. Insert six  $7/8$ " long splines into each concave RAIL and two 6" splines into each cabinet STILE.
2. Spread glue around splines where the cabinet SIDE will come in contact with the FRONT FRAME. Push the cabinet SIDE down onto the splines
3. Spread glue on each side of the splines in the cabinet front RAILS. Slide the TOP and BOTTOM down into the cabinet SIDE and against the FRONT FRAME (as shown.)

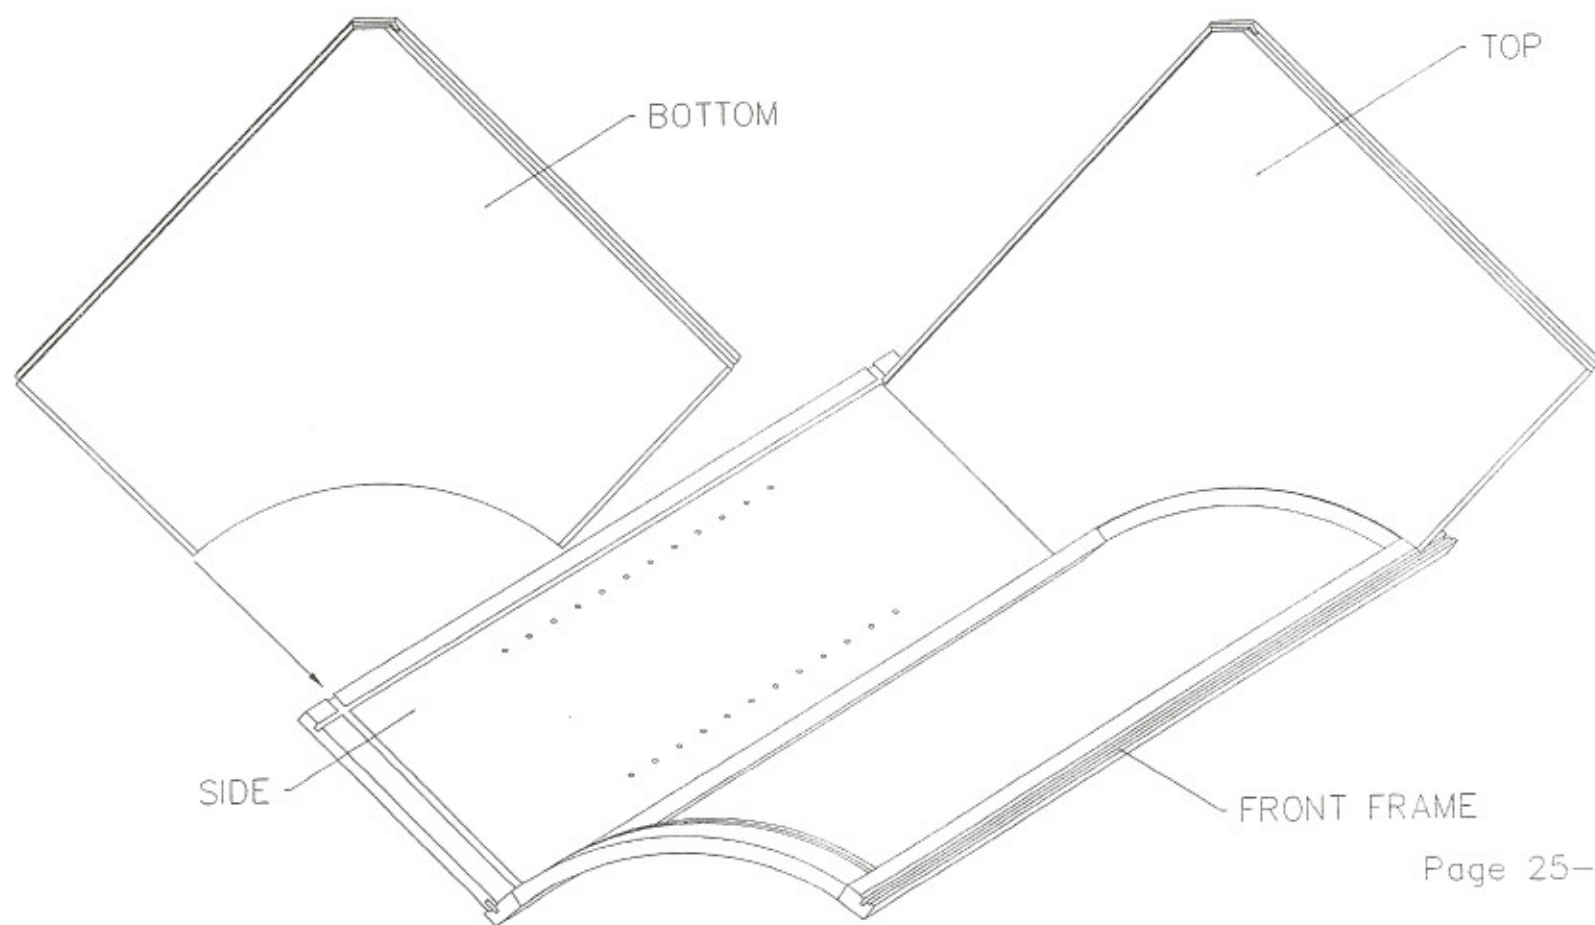


## WALL CONCAVE CABINET (cont.)

4. Using the male dovetails on the TOP and BOTTOM, slide the second cabinet SIDE into place (as shown.) Be sure the grooved edge is inserted first to accept the splines.
5. Using the rabbets in the TOP & BOTTOM, slide the one cabinet BACK down until it is seated in the cabinet SIDE plough.

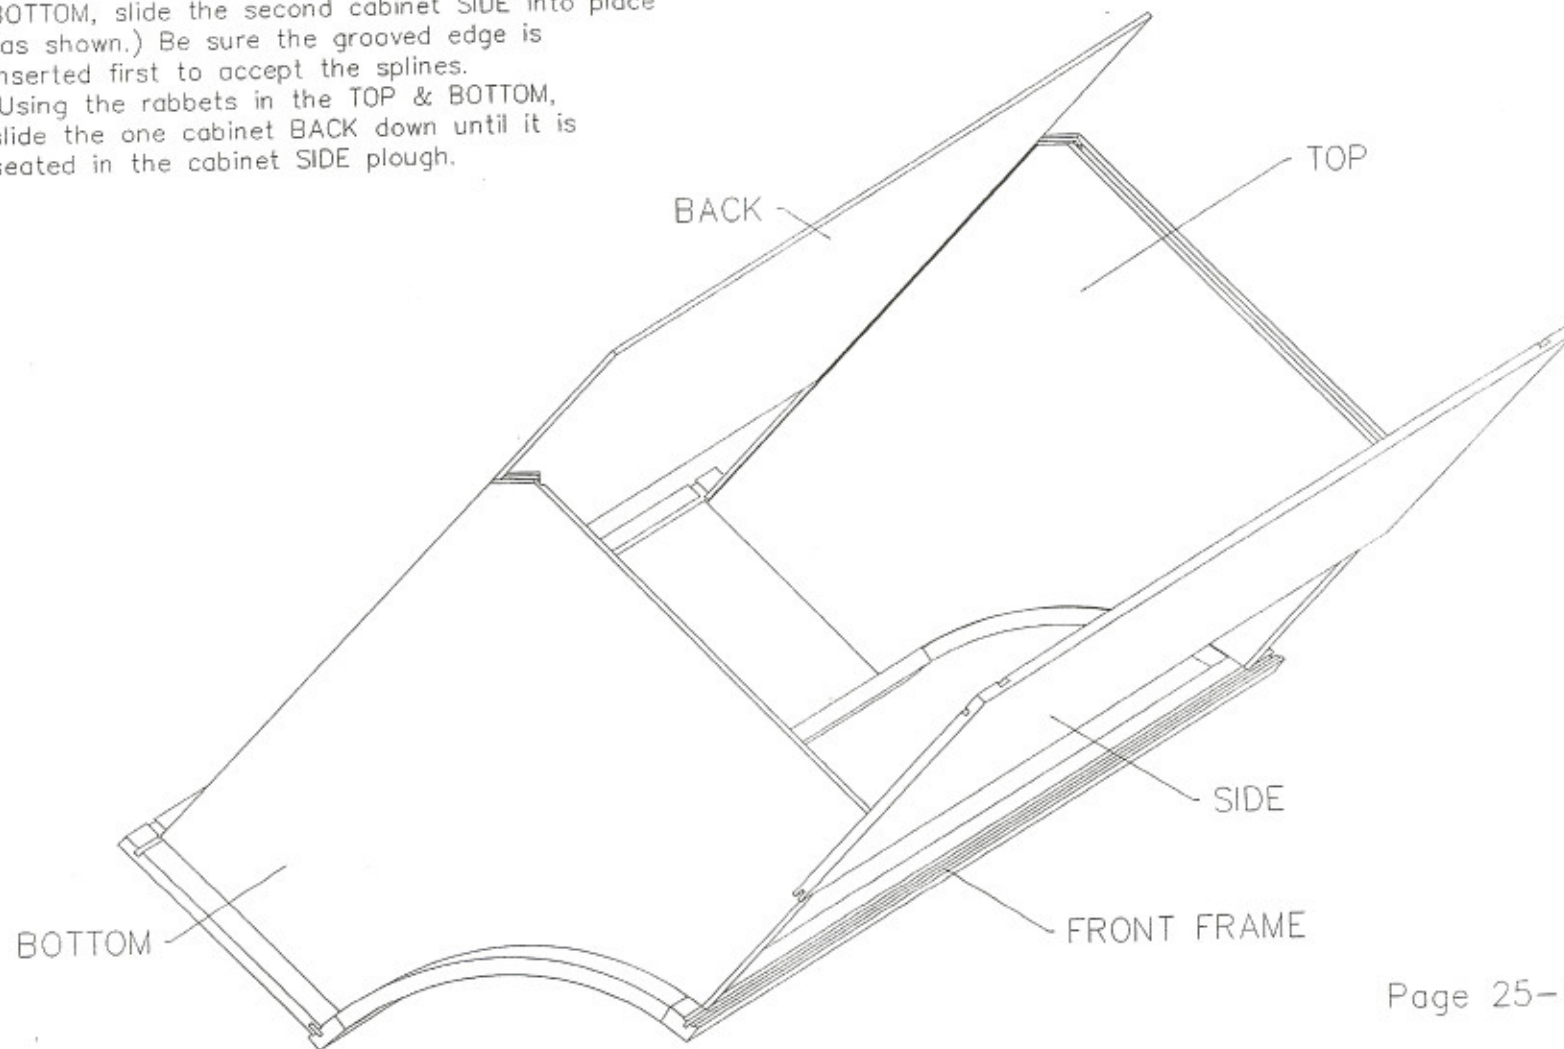

## WALL CONCAVE CABINET (cont.)

- Slide the the other cabinet  
BACK into place.

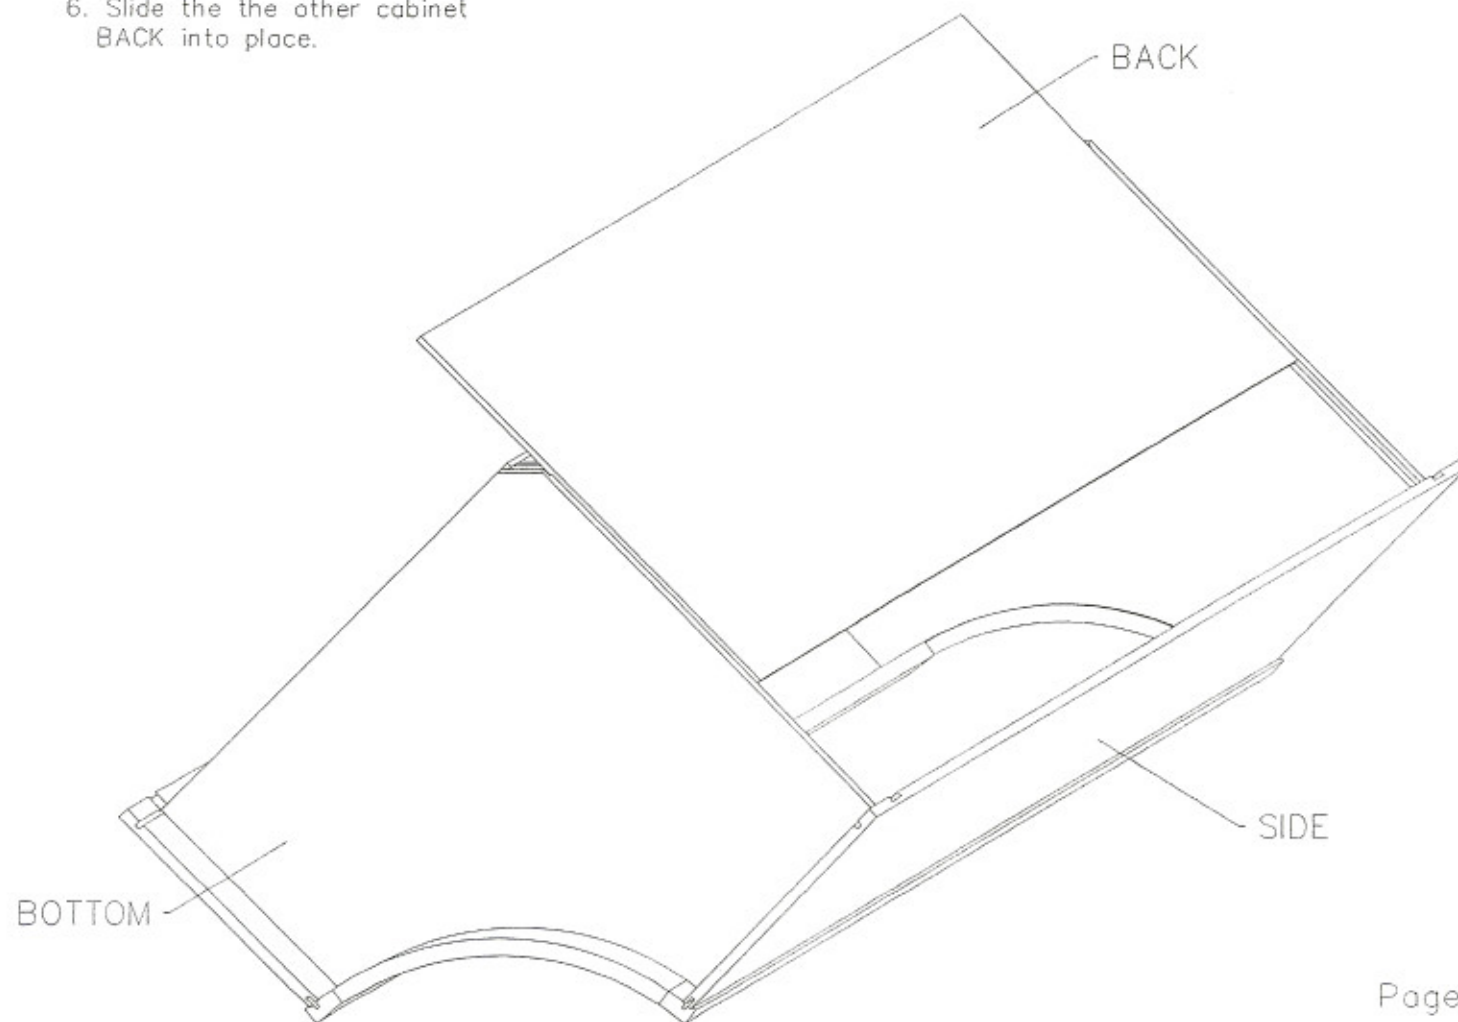

## WALL CONCAVE CABINET (cont.)

7. Insert a small spline in the top and bottom groove. The BACK CORNER PIECE can now be attached. The cabinet BACKS must be positioned into grooves in the BACK CORNER PIECE before being attached to the cabinet box.
8. Apply a bead of glue on cabinet BACK. Slide HANGER CLEAT into place. Using the scribe line on CLEAT, pin the CLEAT into place. Do this for each HANGER CLEAT.

