



## WALL CORNER DOUBLE ENTRY CABINET

1. After inserting splines in FRONT FRAME, lay FRONT face down on a clean, smooth surface.
2. Insert TOP and BOTTOM into the splines in the rails (as shown). Make sure the rabbet is toward the inside of the cabinet.

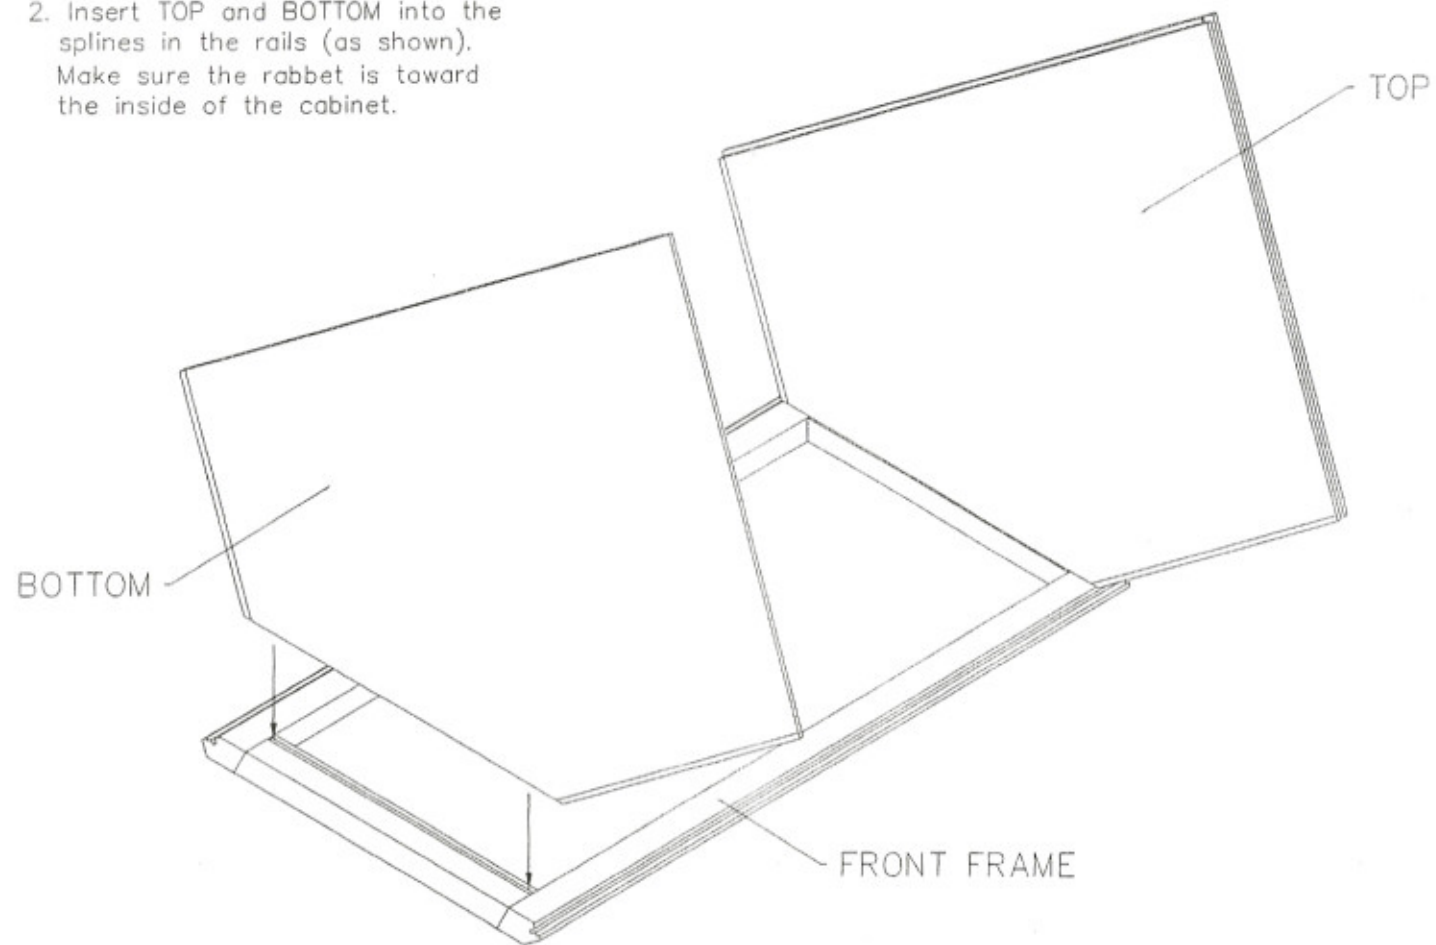


## WALL CORNER DOUBLE ENTRY CABINETS (cont.)

3. Using the male dovetails on the TOP & BOTTOM, slide the cabinet SIDES into place (as shown). Be sure the grooved edge is inserted first to accept the splines in the FRONT FRAME.
4. Using the rabbet in the TOP and BOTTOM, slide the cabinet BACK towards the SIDE until it is seated in the cabinet SIDE plough.

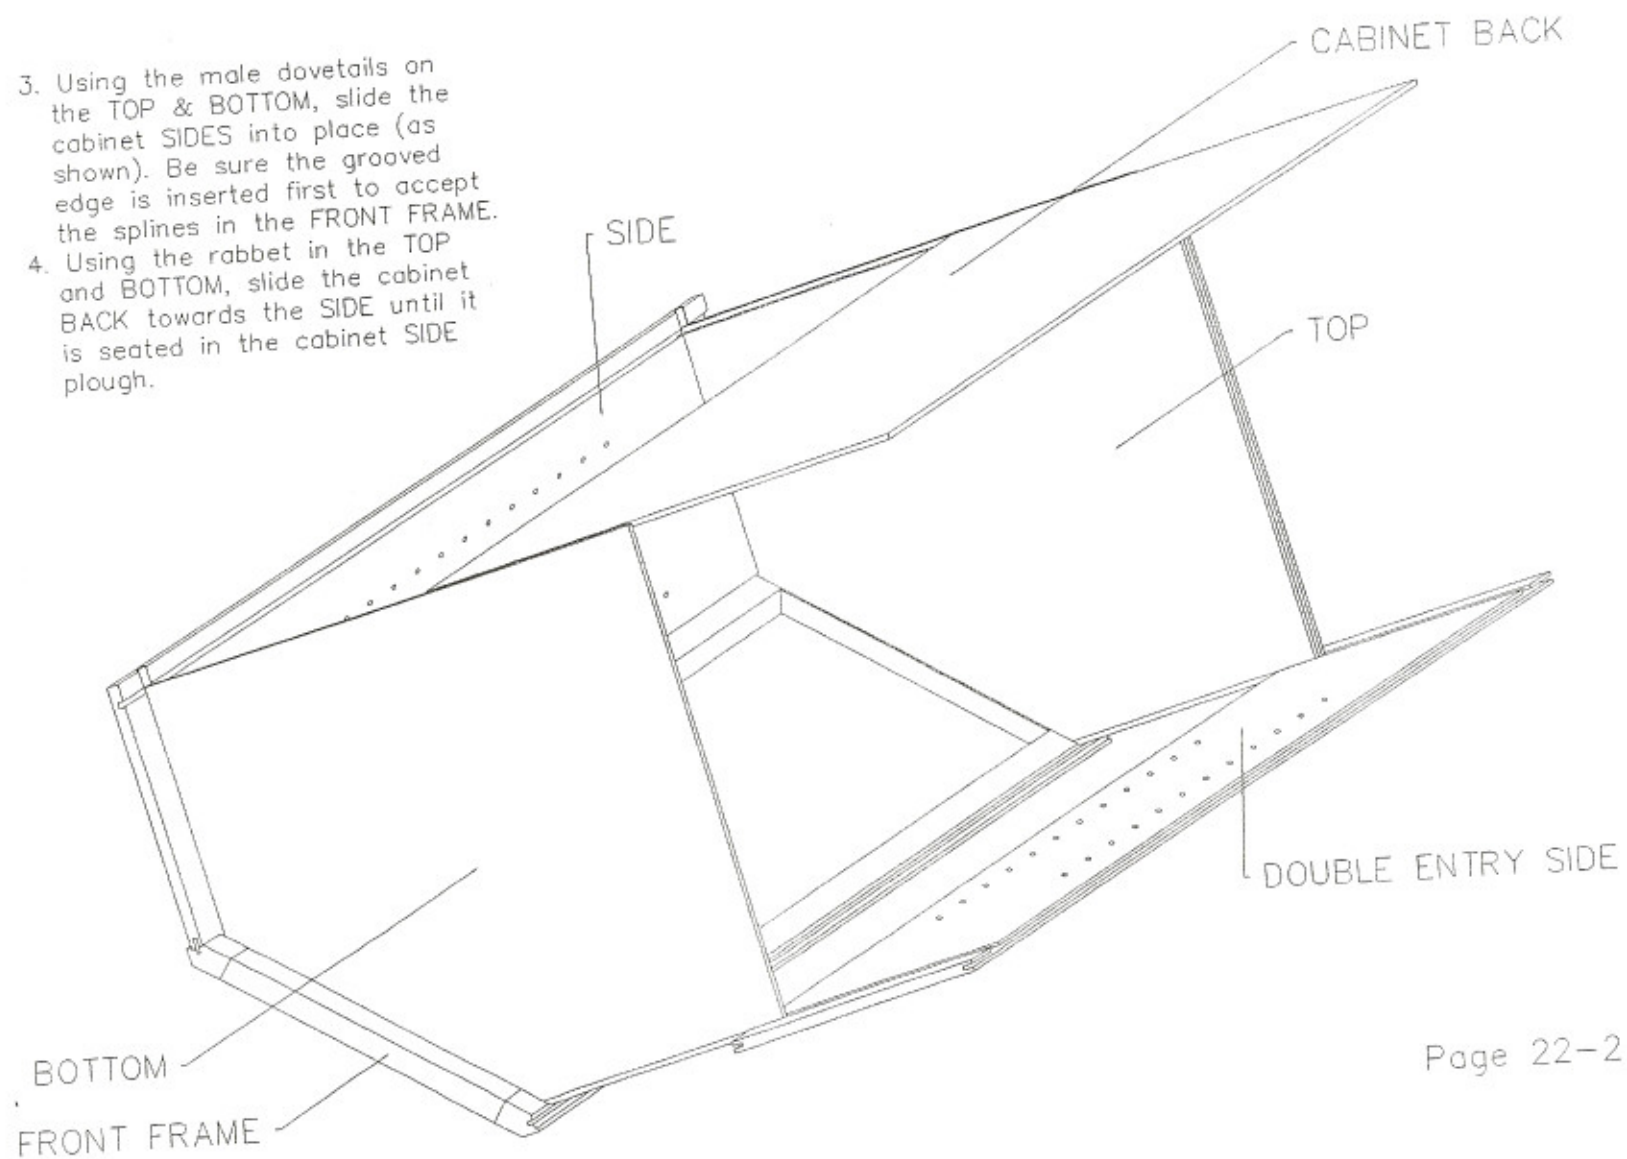

## WALL CORNER DOUBLE ENTRY CABINETS (cont.)

5. After inserting splines in the DOUBLE ENTRY FRONT, spread glue on the slotted edges of the TOP, BOTTOM and SIDE. Tap the FRONT on with a rubber mallet. Be sure the FRONT is pressed firmly onto the cabinet box.

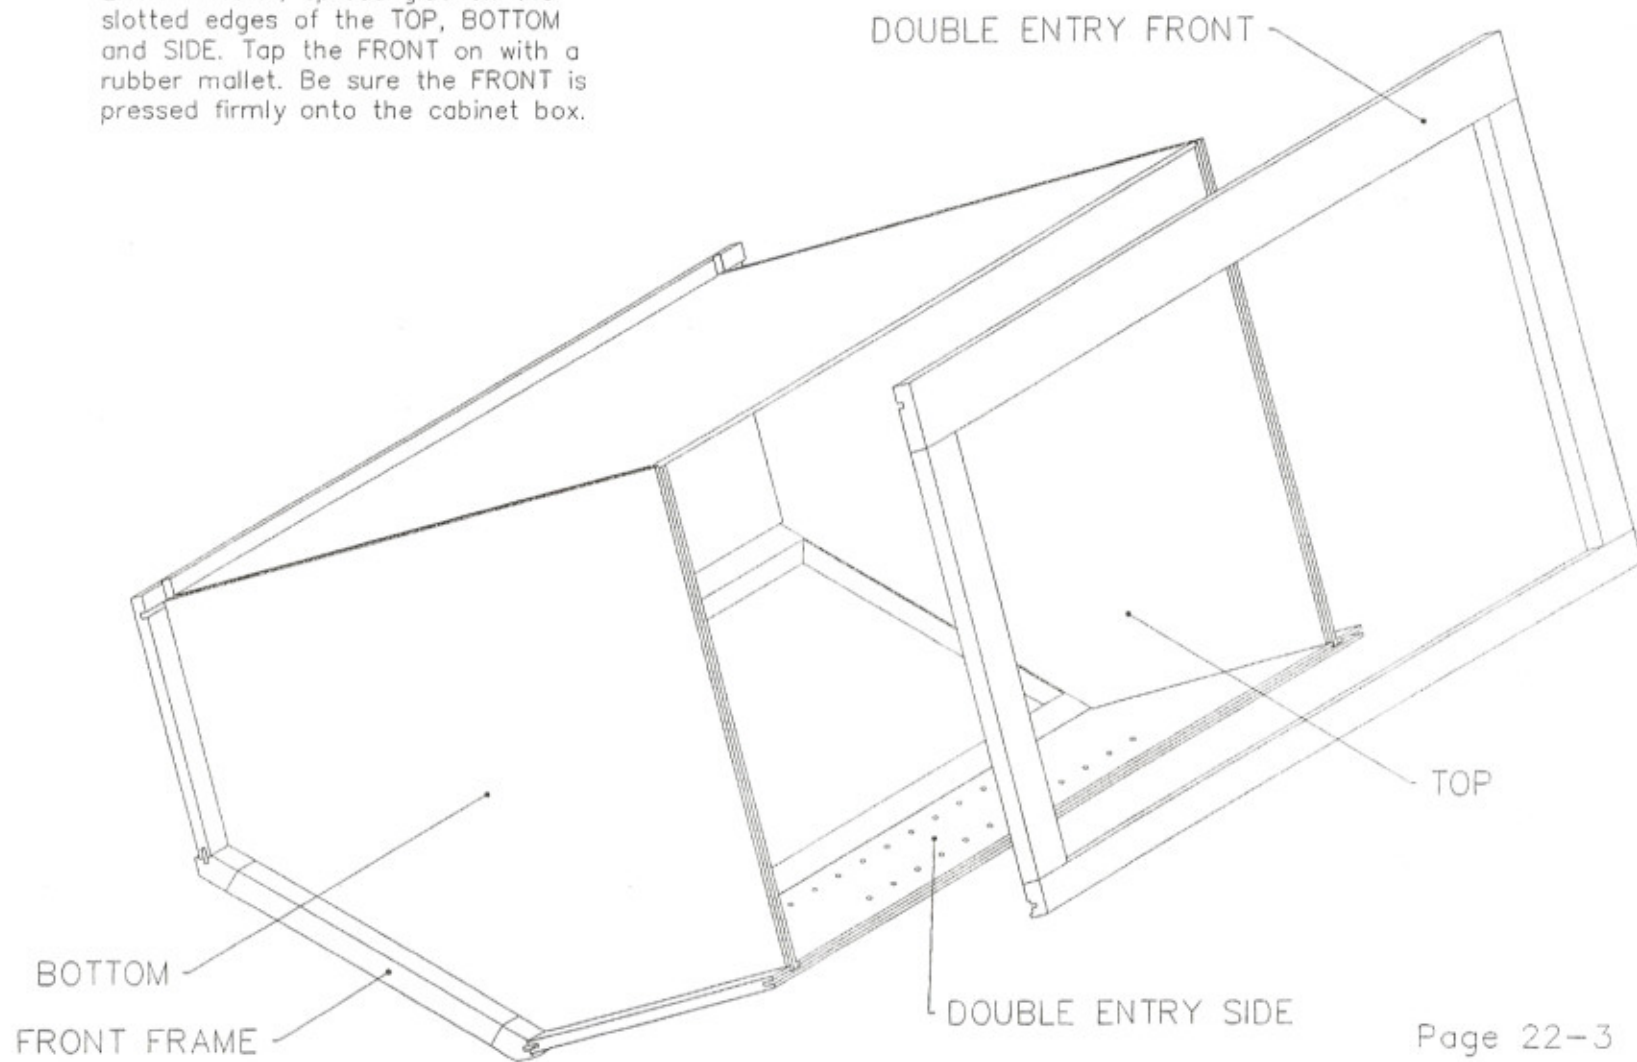

## WALL CORNER DOUBLE ENTRY CABINETS (cont.)

6. Apply a bead of glue on the cabinet BACK where the HANGER CLEAT will be positioned. Slide the HANGER CLEAT into place. Using the scribe line on the CLEAT, pin the CLEAT into place. Do this for both HANGER CLEATS.

