


## WALL MICROWAVE CABINET

1. Place cabinet SIDES in assembly jig with slotted edges up.
2. Slide the TOP into the female dovetails. (as shown) Be sure to keep the grooved edges up, and the rabbet toward the inside of the cabinet.
3. Slide the FIXED SHELF into the middle female dovetail. Make sure the rabbet is toward the cabinet TOP. Do NOT slide the FIXED SHELF down the entire way (as shown.)
4. Slide the cabinet BACK into the ploughs at the back of the SIDES. The cabinet BACK will fit between the FIXED SHELF and the cabinet TOP.

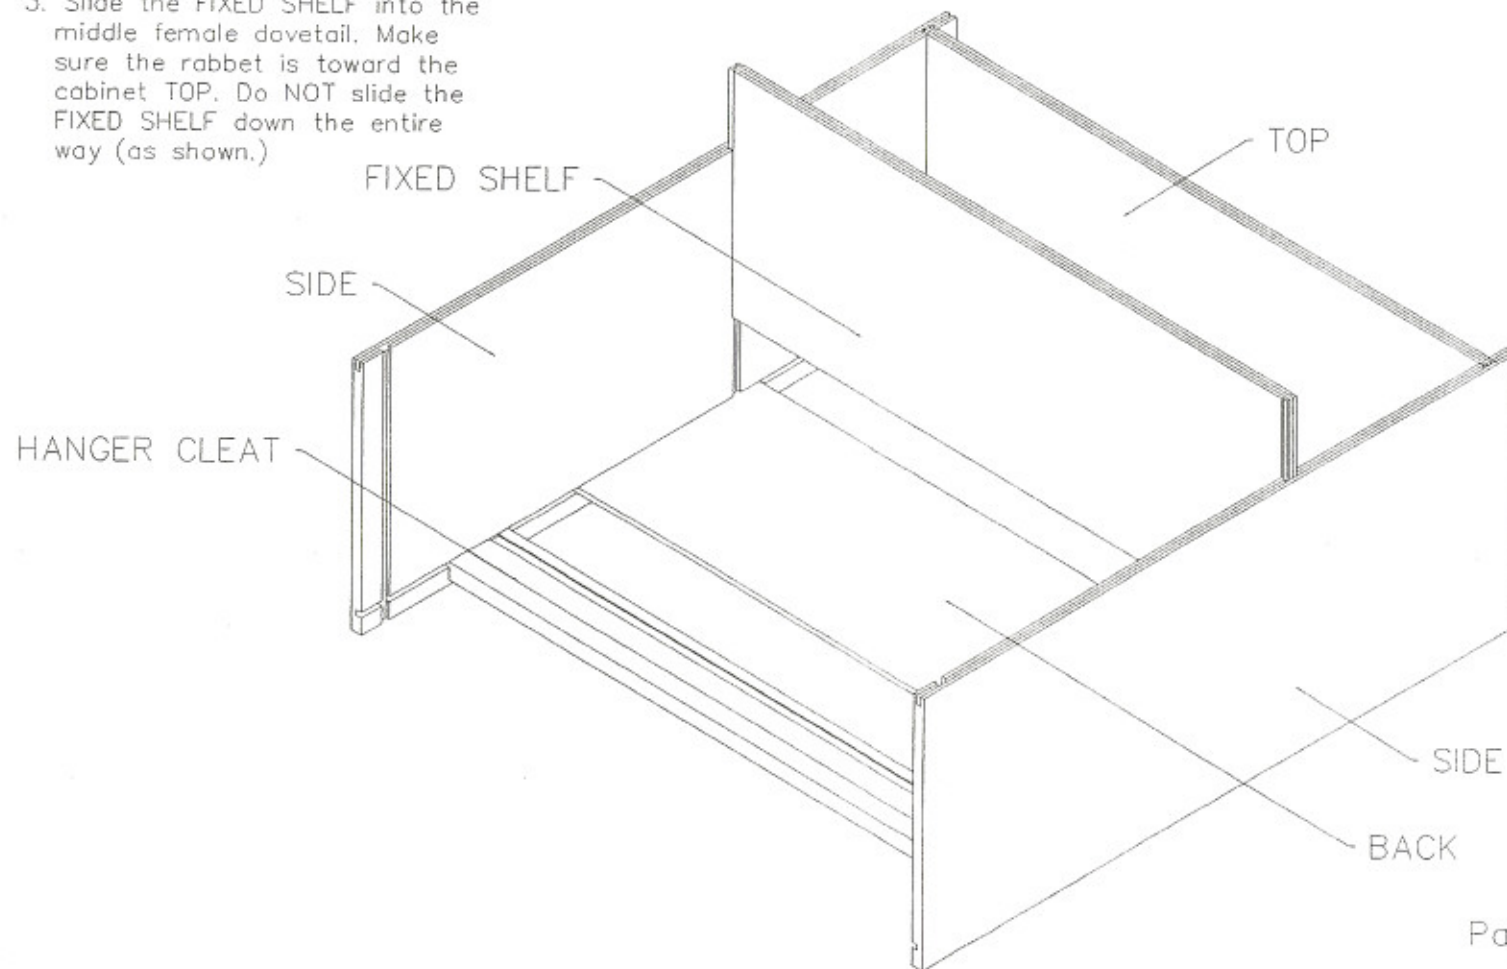

## WALL MICROWAVE CABINET (cont)

7. Lay cabinet face down on a clean, smooth surface.
8. Apply a bead of glue on the back of the cabinet BACK. (as shown)
9. Slide the HANGER CLEATS into place.
10. Using the scribe line on the HANGER CLEAT, pin the CLEAT into place. Pin through the cabinet SIDES into the CLEATS. Use at least 1" long pins.

